

Fig. 1

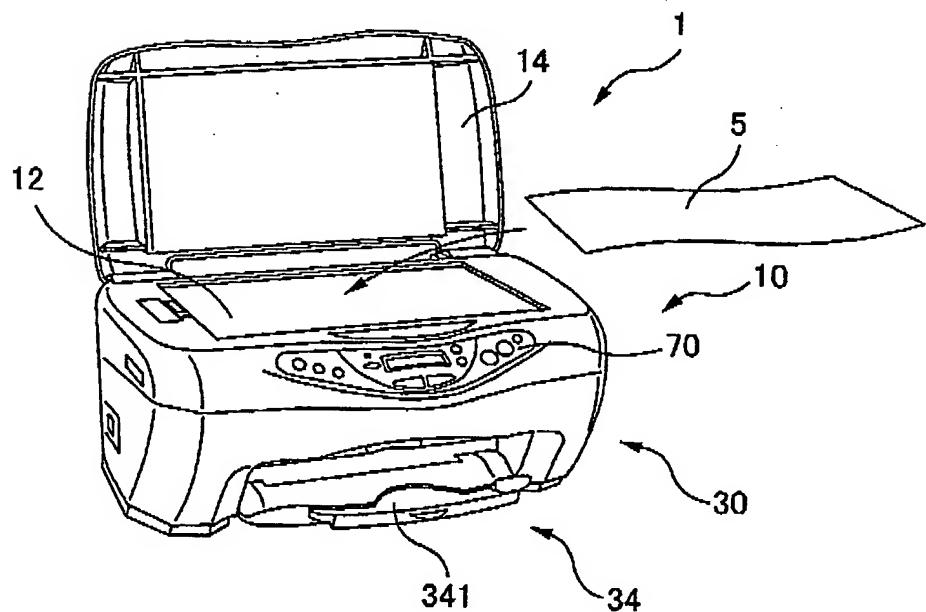


Fig. 2

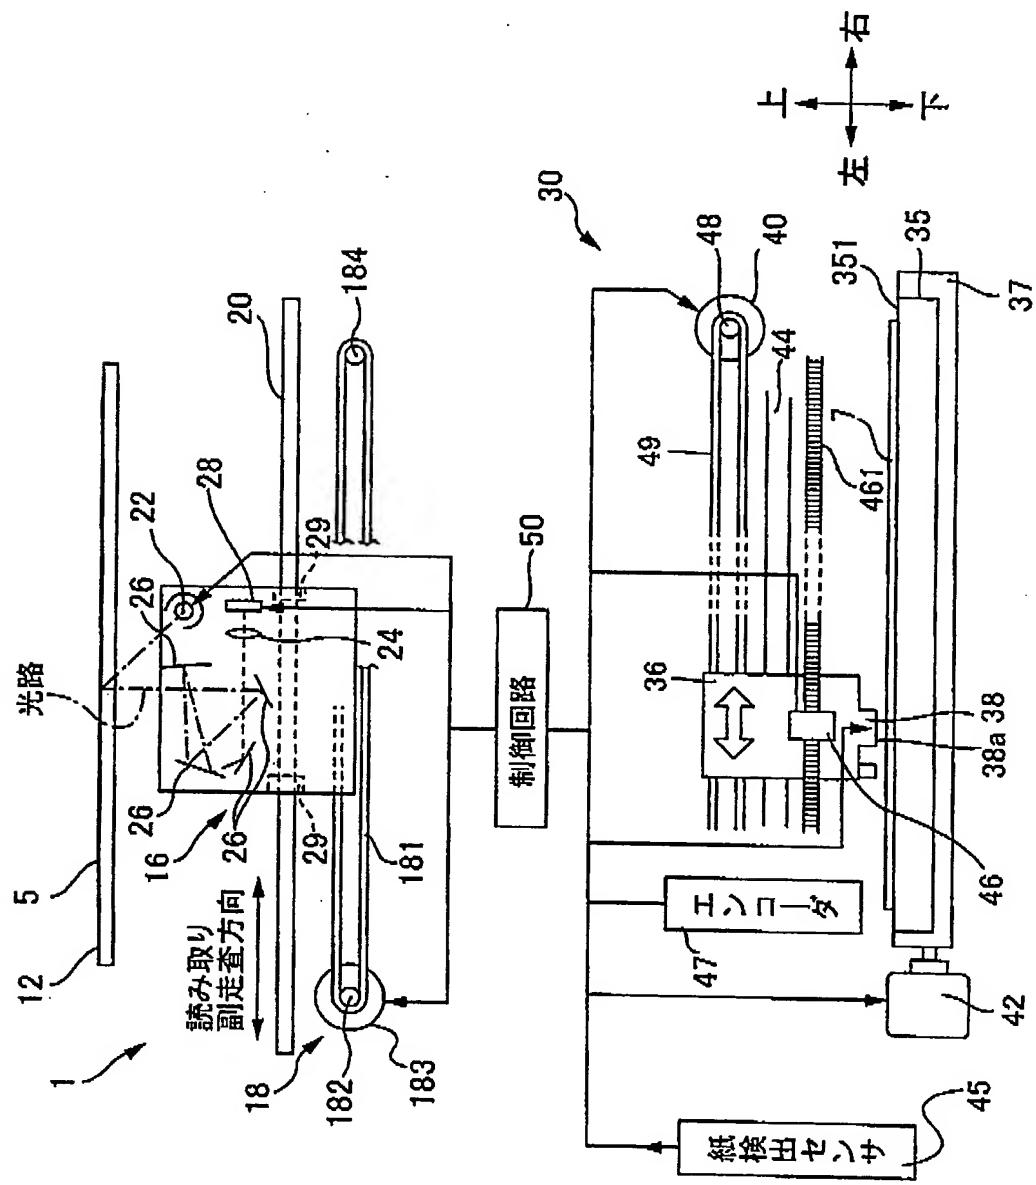


Fig. 3

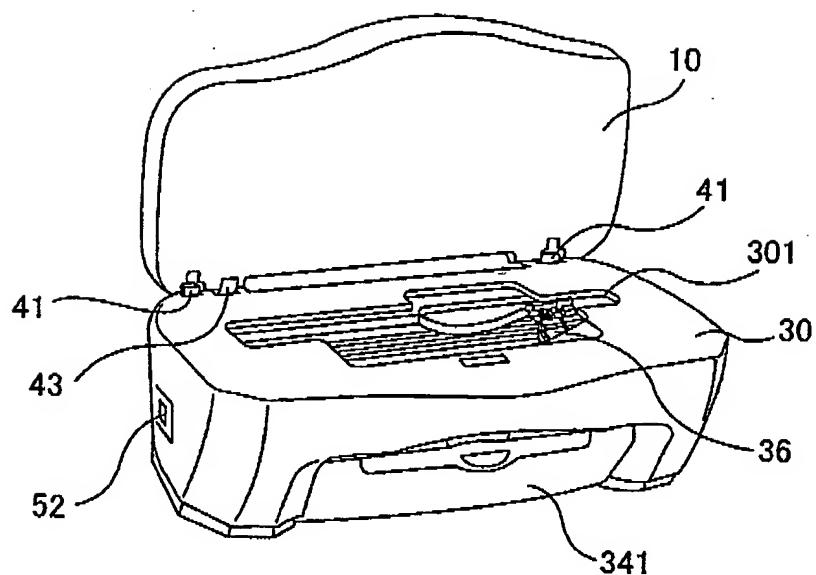


Fig. 4



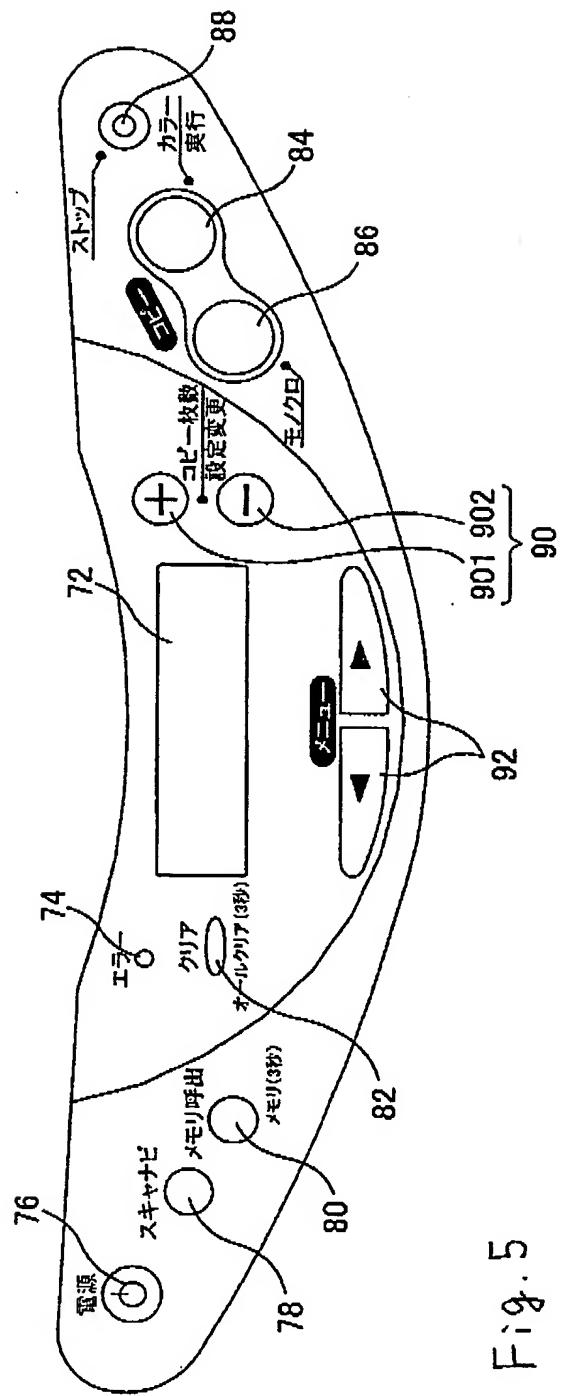


Fig. 5

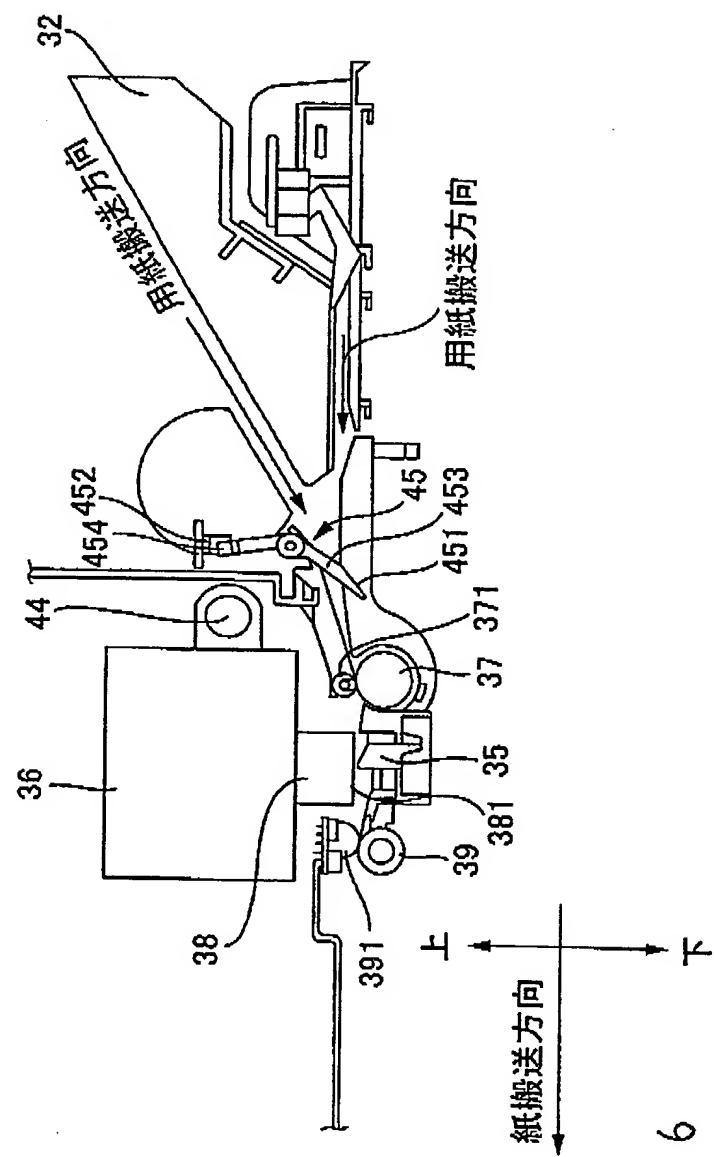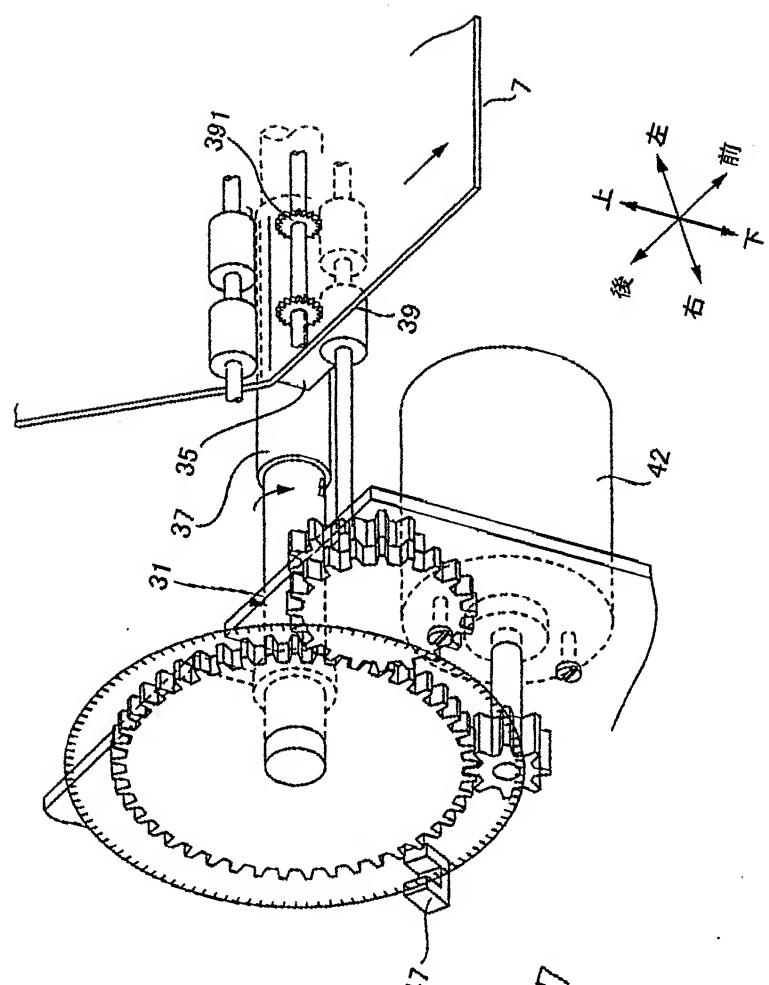

६
८
८

7/18



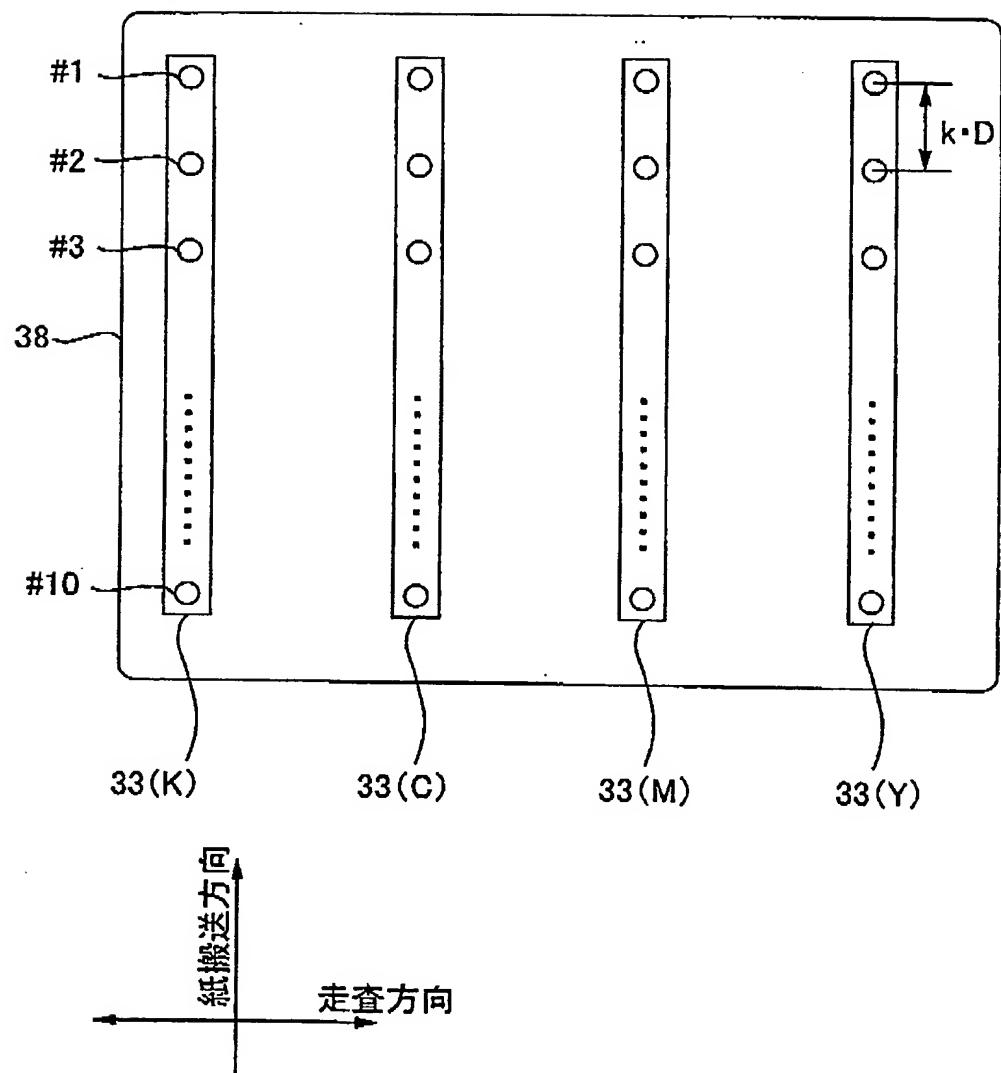


Fig. 8

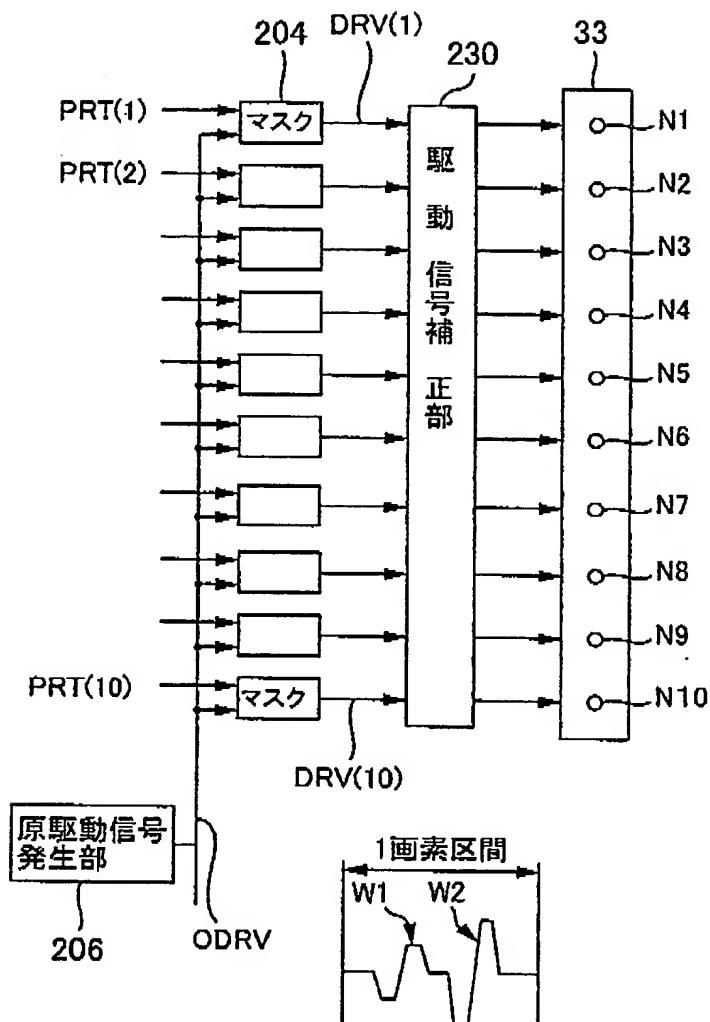


Fig. 9

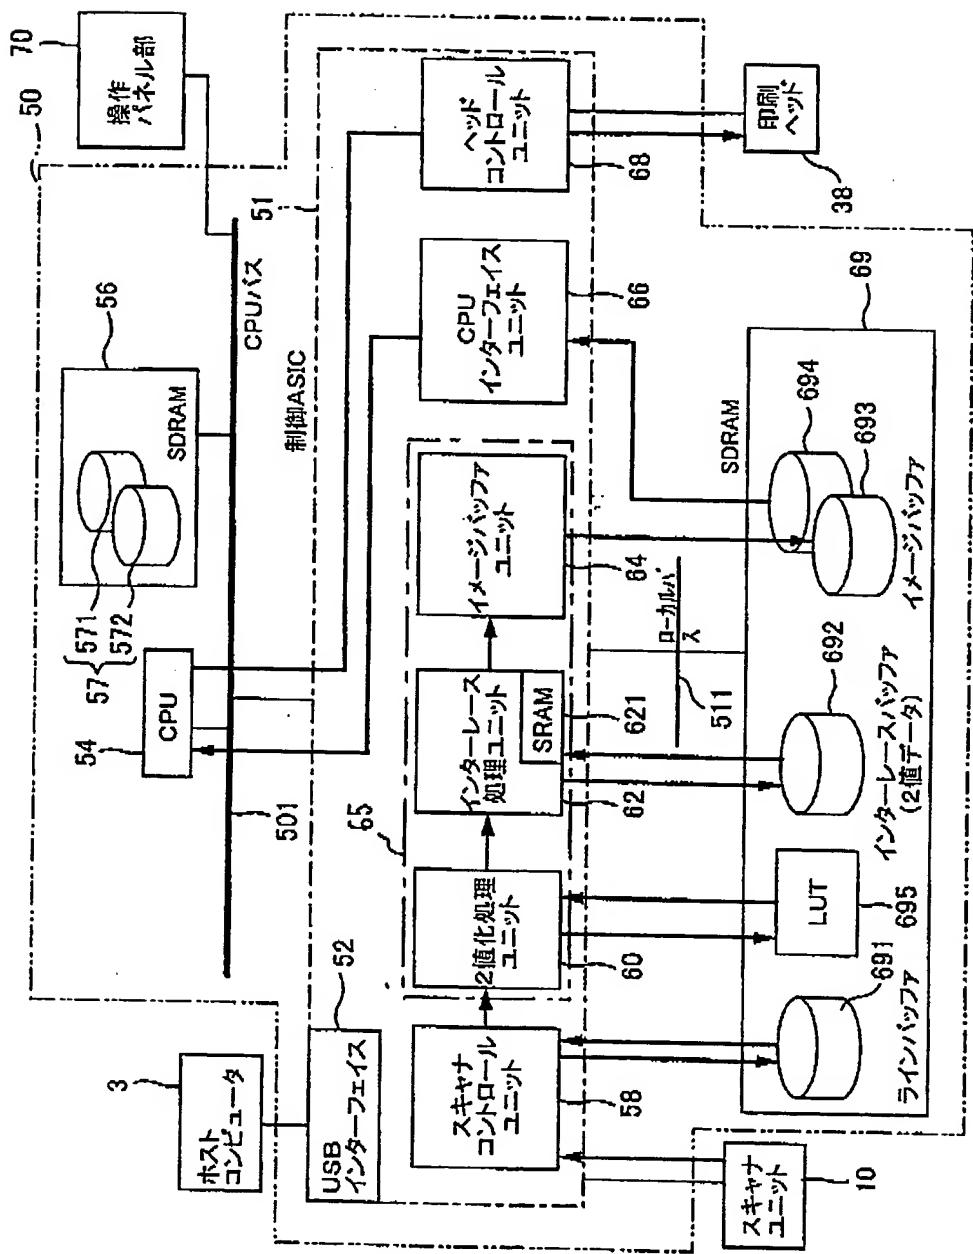


Fig. 10

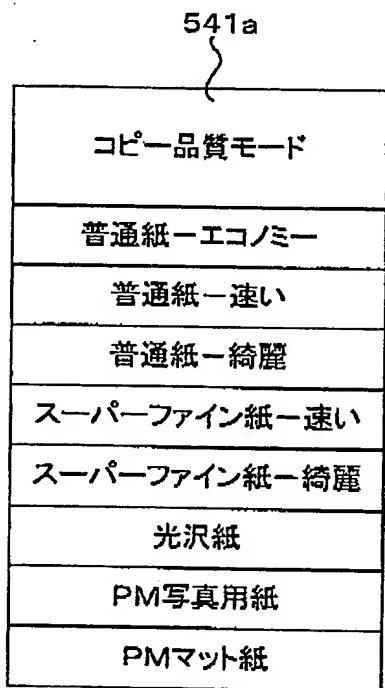


Fig. 11

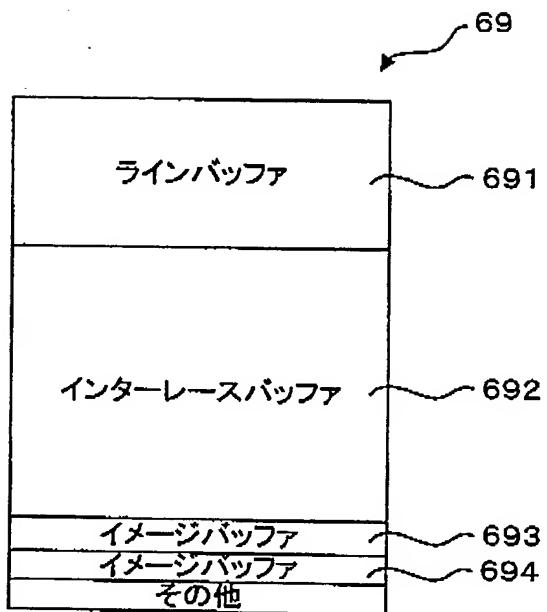


Fig. 12

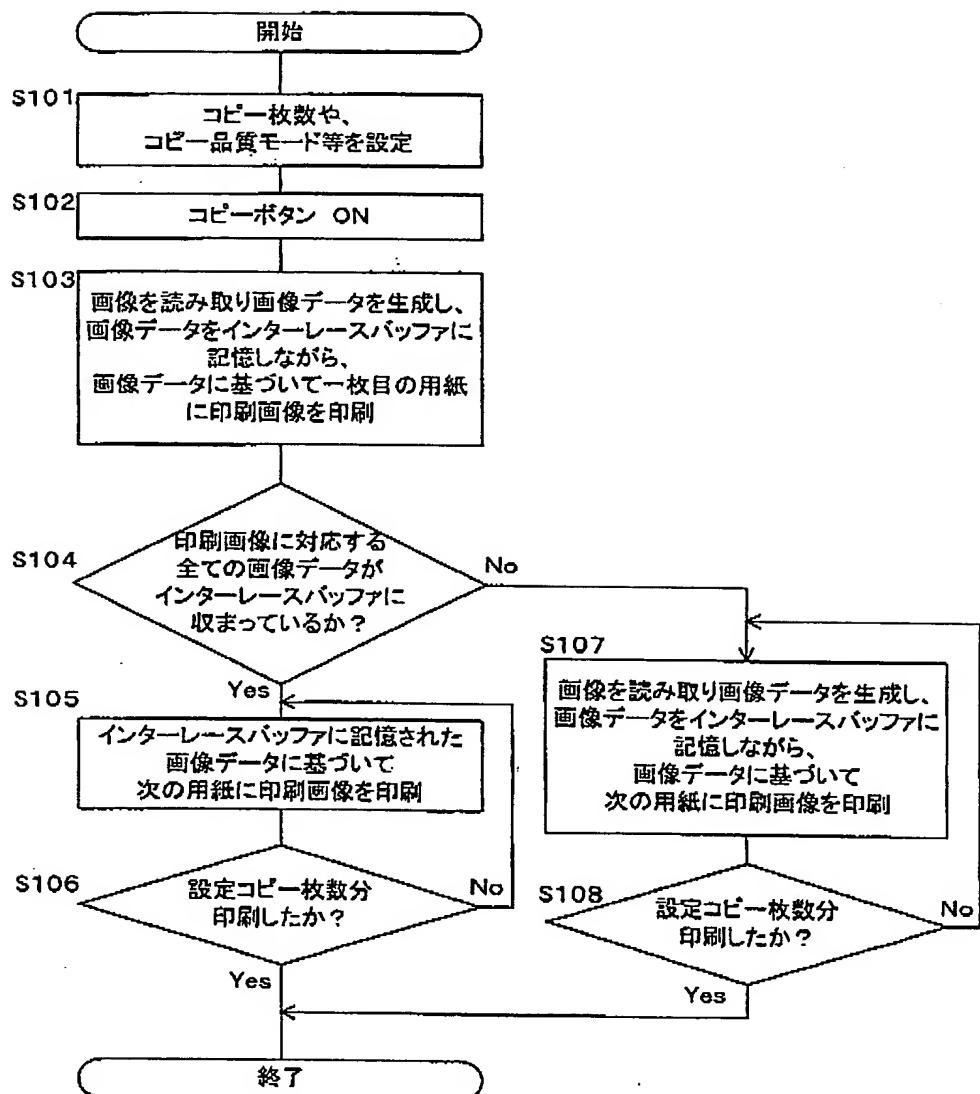


Fig.13

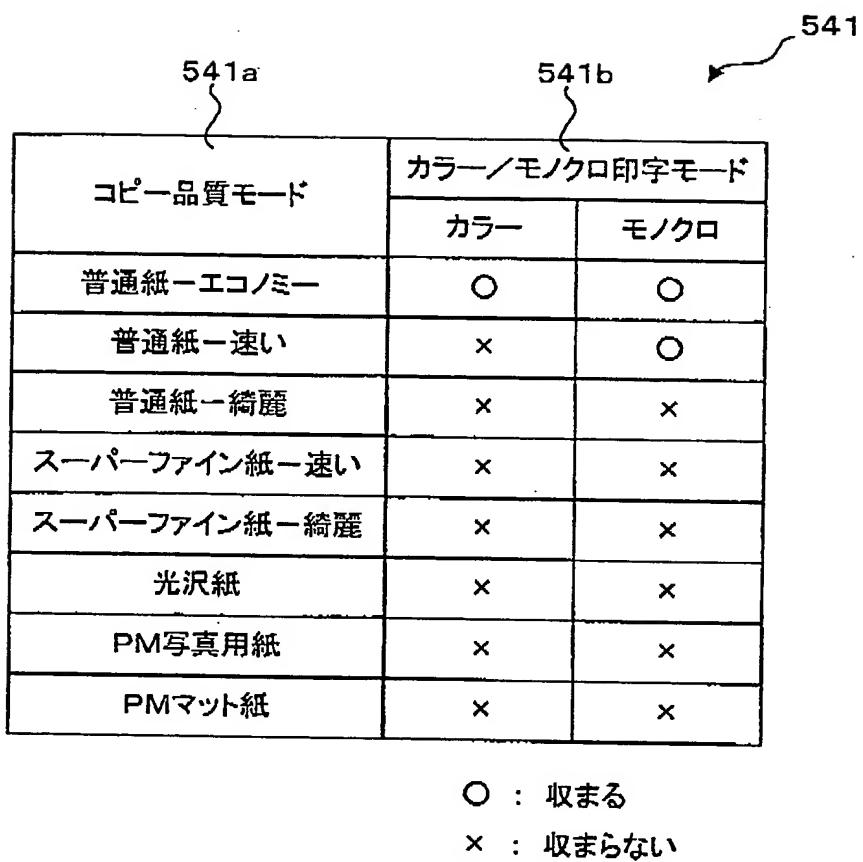


Diagram illustrating the selection of paper trays (541a, 541b, 541c) for different copy quality modes (Copy Quality Mode, Color/Monochrome Print Mode).

The table shows the availability of paper trays for various paper types and modes:

Copy Quality Mode	Color/Monochrome Print Mode	
	Color	Monochrome
普通紙—エコノミー	○	○
普通紙—速い	×	○
普通紙—綺麗	×	×
スーパーフайн紙—速い	×	×
スーパーフайн紙—綺麗	×	×
光沢紙	×	×
PM写真用紙	×	×
PMマット紙	×	×

Legend:

- : 収まる (Available)
- × : 収まらない (Not available)

Fig. 14

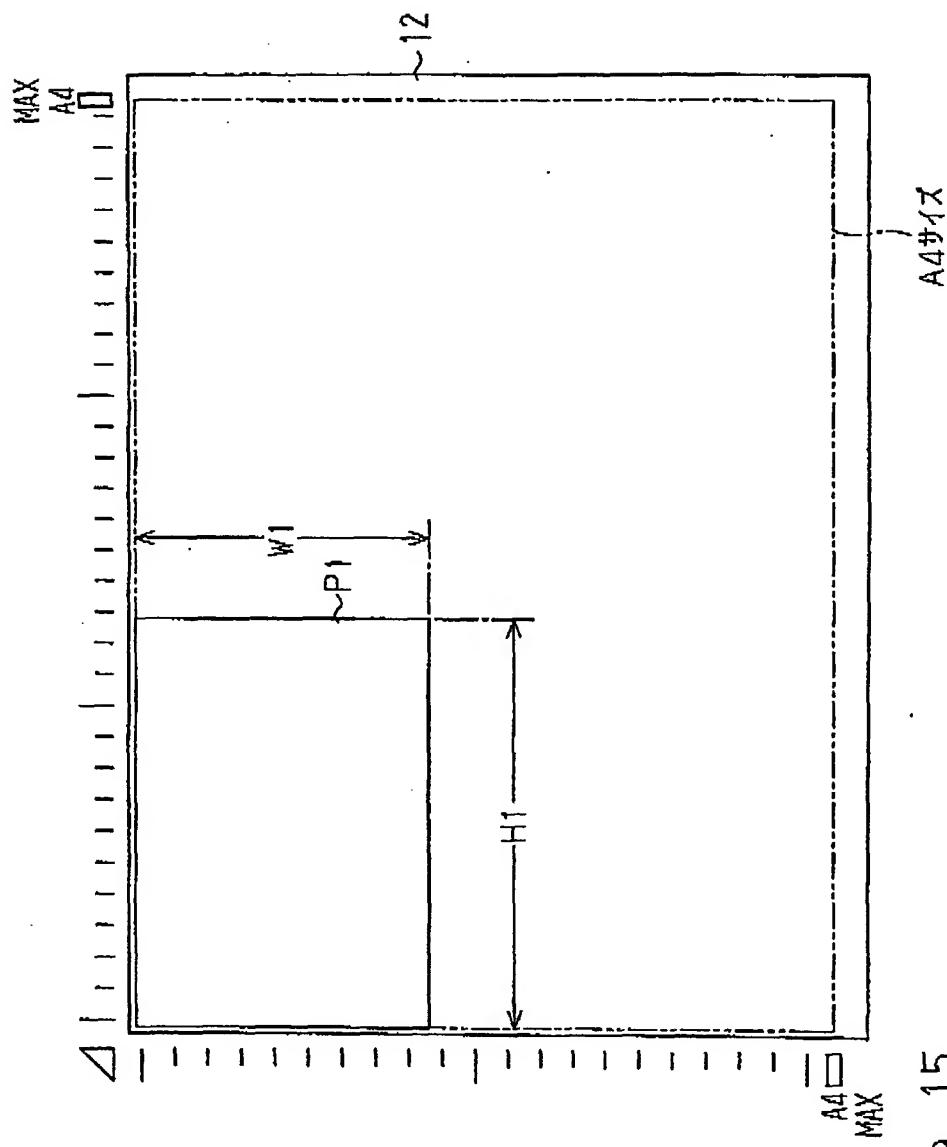


Fig. 15

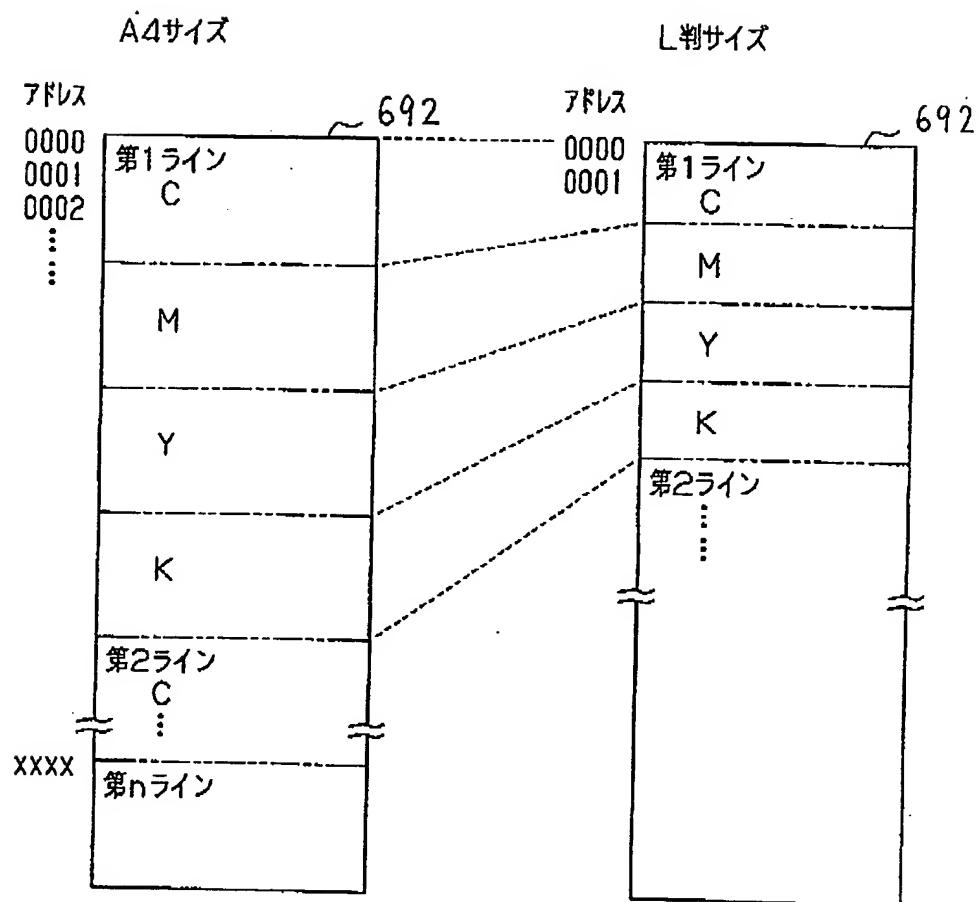


Fig. 16

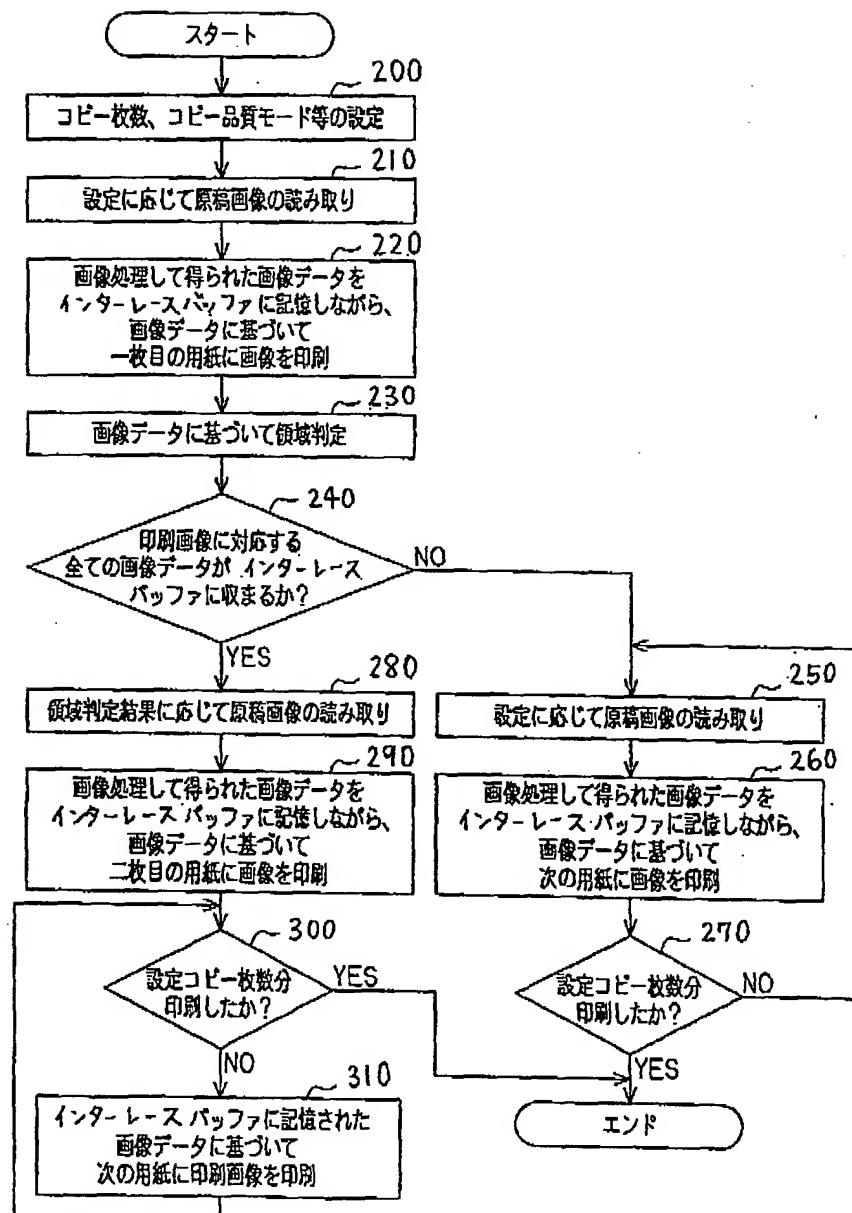


Fig. 17

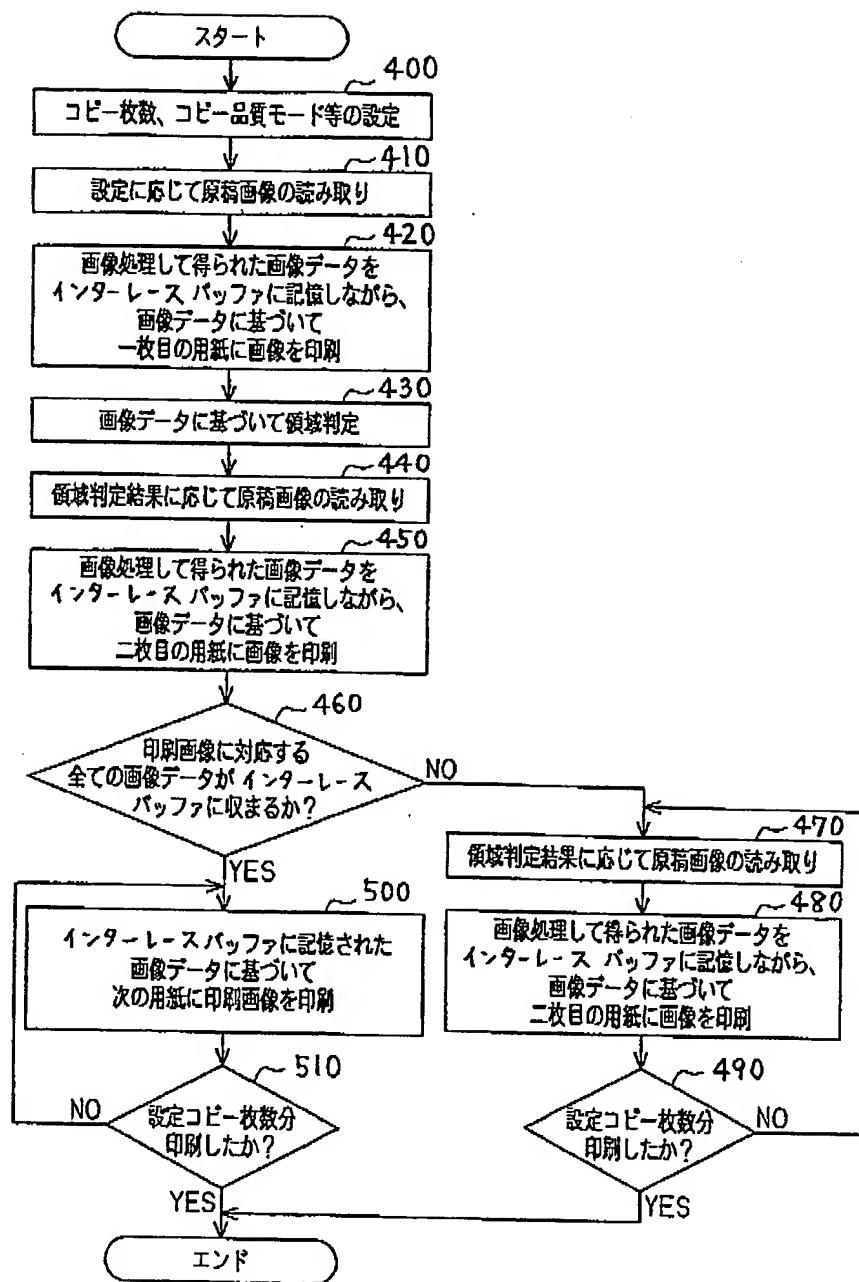


Fig. 18